




1 A B		2 B A C D E F G			
Ax1	Bx1	Cx1	Dx1	Ex1	Gx5
Fx1					

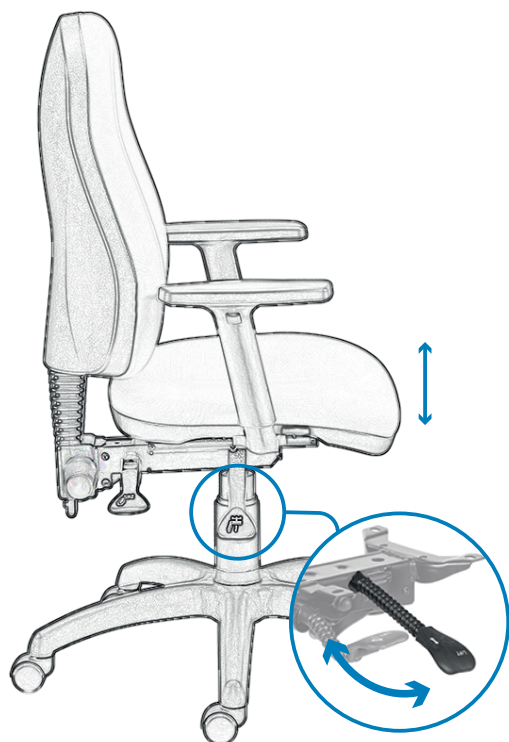

Seat height adjustment
by front right lever

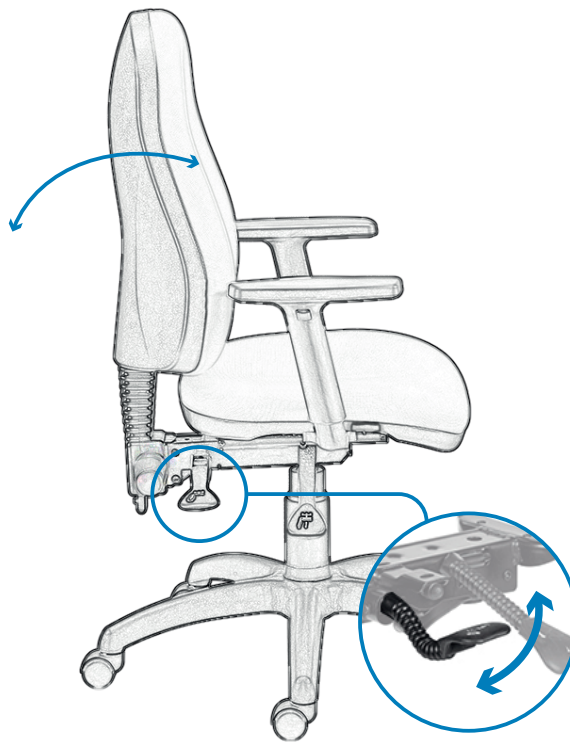

Adjusting the angle of the
backrest by rear right lever

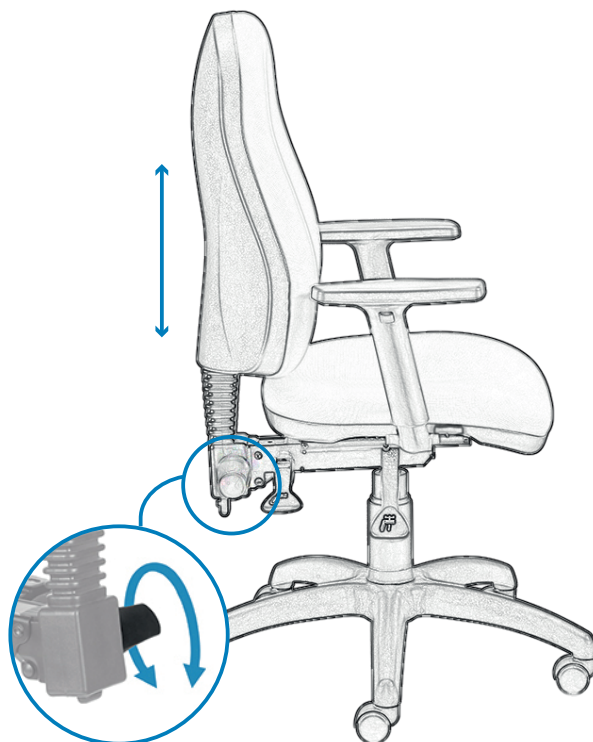

Adjusting the height of the backrest
by locking the handwheel